

Replacing the projection lamp

SP-LAMP-038 - Used in IN5106, C500, IN5102, C447
SP-LAMP-046 - Used in IN5104, C448, IN5108


The lamp hour timer in the Service Info menu counts the number of hours the lamp has been in use. Twenty hours before the specified end of the lamp's life, the message "Change lamp" briefly appears on the projected screen.

NOTE: You can order new lamps from www.infocus.com (in select areas), your retailer or your dealer. Only use the specified replacement lamp for your projector. Order SP-LAMP-038 or SP-LAMP-046 with respect to your projector model.


WARNINGS:

- To avoid burns, allow the projector to cool for at least 45 minutes before you replace the lamp.
- Only genuine InFocus lamps are tested with this projector. Use of other lamps may cause electrical shock and fire.
- If replacing the lamp while the projector is ceiling mounted, wear protective eyewear.
- Do not drop the lamp module. The glass may shatter and cause injury. Do not touch the glass lamp screen. Fingerprints can obscure projection sharpness.
- Be extremely careful when removing the lamp housing. In the unlikely event that the bulb ruptures, small glass fragments may be generated. The lamp housing is designed to contain these fragments, but use caution when removing the lamp housing. Before replacing the lamp, clean the lamp compartment and dispose of cleaning materials. Wash hands after lamp replacement.
- Hg – Lamp contains mercury. Manage in accordance with local disposal laws. See www.lamprecycle.org.


- 1 Turn off the projector and unplug the power cable.
- 2 Wait 45 minutes to allow the projector to cool thoroughly.
- 3 Loosen the lamp cover screw on the right side of the projector (marked by the arrow) then slide and lift the lamp cover off.
- 4 Loosen the three captive screws (marked by the arrows) on the lamp module.
- 5 Carefully remove the lamp module by grasping and lifting the handle. Dispose of the lamp in an environmentally proper manner.
- 6 Install the new lamp module, making sure that it is properly seated, and tighten the three captive screws.
- 7 Replace the cover over the lamp module by sliding it back into place and tightening the screw.
- 8 Plug in the power cable, press the power switch then press the **Power** button to turn the projector back on. Reset the lamp hour timer by navigating to the **Settings>Service** menu and selecting **Reset Lamp Hours**.

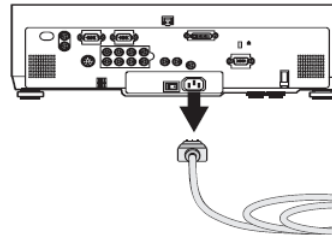


turn off and unplug
the projector

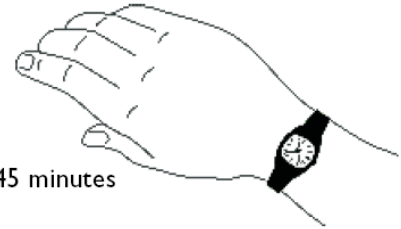


wait 45 minutes

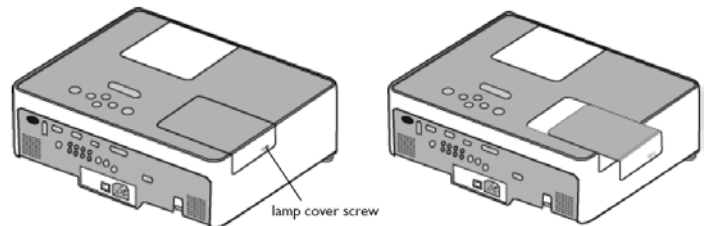

lamp cover screw

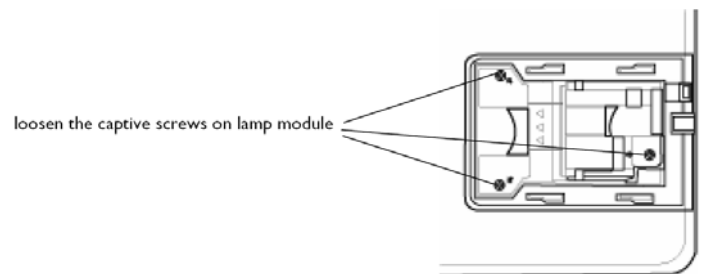

loosen the captive screws on lamp module

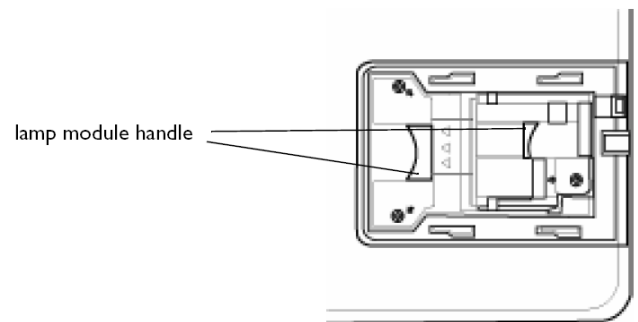

lamp module handle



reset lamp hours in Service menu